LASERJET PRO 200 COLOR MFP

Service Manual

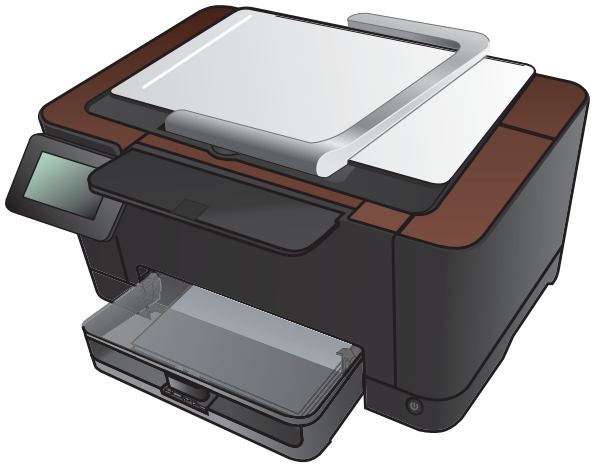

M275nw

HP LaserJet Pro 200 color MFP M275nw

Service Manual

Copyright and License

© 2011 Copyright Hewlett-Packard Development Company, L.P.

Reproduction, adaptation, or translation without prior written permission is prohibited, except as allowed under the copyright laws.

The information contained herein is subject to change without notice.

The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Part number: CF040-90969

Edition 1, 10/2011

Trademark Credits

Microsoft®, Windows®, Windows® XP, and Windows Vista® are U.S. registered trademarks of Microsoft Corporation.

ENERGY STAR® and the ENERGY STAR® mark are registered U.S. marks.

Important Safety Notice

Warning: This product includes a camera arm that is used to photograph documents. This camera arm is not intended to be used as a handle or carrying device. To carry the product, use the handles located on the bottom right and left sides of the product.

Conventions used in this guide

TIP: Tips provide helpful hints or shortcuts.

NOTE: Notes provide important information to explain a concept or to complete a task.

CAUTION: Cautions indicate procedures that you should follow to avoid losing data or damaging the product.

WARNING! Warnings alert you to specific procedures that you should follow to avoid personal injury, catastrophic loss of data, or extensive damage to the product.

Table of contents

1 Removal and replacement 1

Introduction 2
Removal and replacement strategy 2
Electrostatic discharge 3
Required tools 3
Service approach 4
Before performing service 4
After performing service 4
Post-service test 4
Product verification test 4
Parts removal order 5
Removal and replacement procedures 6
Input tray 6
Output bin 7
Print cartridges 8
Imaging drum 13
Secondary transfer roller 20
Separation pad assembly 21
Covers, pickup roller, and camera arm 22
Right cover assembly 22
Left rear cover assembly 23
Pickup roller 24
Remove the pickup roller assembly 25
Rear door assembly 26
Remove the rear door assembly 26
Rear-lower cover 27
Remove the rear-lower cover 27
Cosmetic cover 28
Remove the cosmetic cover 28
Fuser cover 29
Remove the fuser cover 29
Camera arm assembly 30

Remove the camera arm assembly 30
Top cover assembly 34
Remove the top cover assembly 34
Door hinge 37
Remove the door hinge 37
Left front cover and control panel assembly 38
Remove the left front cover and control panel assembly 38
Top-upper-left front cover 41
Remove the top-upper-left front cover 41
Top-upper-right front cover 43
Remove the top-upper-right front cover 43
Inner cover 44
Remove the inner cover 44
Main assemblies 45
Formatter and wireless PCA 45
Remove the formatter and wireless PCA 45
Fuser power supply 47
Remove the fuser power supply 47
ITB assembly 48
Remove the ITB assembly 49
Fuser delivery assembly 58
Remove the fuser delivery assembly 59
Engine controller assembly 63
Remove the engine controller assembly 63
Low-voltage power supply assembly 68
Remove the low-voltage power supply assembly 68

2 Solve problems 75

Solve problems checklist 76
Step 1: Make sure that the product is set up correctly 76
Step 2: Check the cabling or wireless connection 76
Step 3: Check the control panel for error messages 77
Step 4: Check the paper 77
Step 5: Check the software 77
Step 6: Test print functionality 77
Step 7: Test copy functionality 77
Step 8: Check the supplies 77
Step 9: Try sending a print job from a computer 78
Print product reports 79
Troubleshooting processes 80
Determine the problem source 80

Power subsystem 81
Power-on checks 81
Tools for troubleshooting 82
Component diagnostics 82
Engine diagnostics 82
Engine test 82
Diagrams 83
Locations of formatter connectors 83
Locations of major components 84
Cross section view 84
External covers and doors (front view) 85
External covers and doors (rear view) 86
General timing chart 87
General circuit diagram 88
Internal print-quality test pages 89
Print a Diagnostics Page 89
Interpret the Print Quality Page 89
Print-quality troubleshooting tools 91
Repetitive image defects ruler 91
Calibrate the product to align the colors 91
Interpret control panel messages 92
Control panel message types 92
Control-panel messages 92
10.XXXX Supply memory error 92
49 Error, Turn off then on 93
50.X Fuser Error 93
79 Error, Turn off then on 93
Door open 93
Engine comm. Error 94
Engine error. Press OK to continue. 94
Jam in <location> 94
Load paper 94
Print failure 95
Event log messages 96
Show an event log 96
Clear jams 98
Jam locations 98
Clear jams from the input tray 98
Clear jams from the output bin 101
Clear jams from the rear door 102
Paper feeds incorrectly or becomes jammed 104

The product does not pick up paper 104
The product picks up multiple sheets of paper 104
Prevent paper jams 104
Improve print quality 105
Check the paper type setting (Windows) 105
Check the paper type setting (Mac OS X) 105
Use paper that meets HP specifications 106
Print a cleaning page 106
Check the estimated remaining life for the print cartridges and imaging drum 107
Inspect the print cartridges and imaging drum for damage 107
Improve copy quality 109
Clean the camera lens cover 109
Solve problems with cropped copies 109
The product prints slowly 109
Solve USB connection problems 110
Solve wired network problems 110
Poor physical connection 111
The computer is using the incorrect IP address for the product 111
The computer is unable to communicate with the product 111
The product is using incorrect link and duplex settings for the network 111
New software programs might be causing compatibility problems 112
The computer or workstation might be set up incorrectly 112
The product is disabled, or other network settings are incorrect 112
Solve wireless network problems 112
Wireless connectivity checklist 112
The product does not print after the wireless configuration completes 113
The product does not print, and the computer has a third-party firewall installed 113
The wireless connection does not work after moving the wireless router or product 113
Cannot connect more computers to the wireless product 113
The wireless product loses communication when connected to a VPN 114
The network does not appear in the wireless networks list 114
The wireless network is not functioning 114
Reduce interference on a wireless network 114
Service mode functions 115
Secondary service menu 115
Open the secondary service menu 115
Secondary service menu structure 115
Product resets 117
Restore the factory-set defaults 117
NVRAM initialization 117
Product updates 117

3 Parts and diagrams 119
Order parts by authorized service providers 120
Order replacement parts 120
Related documentation and software 120
Supplies part numbers 120
Service parts 121
Whole-unit replacement part numbers 121
How to use the parts lists and diagrams 121
Covers and external assemblies (1 of 3) 122
Covers and external assemblies (2 of 3) 124
Covers and external assemblies (3 of 3) 126
Internal assemblies 128
PCAs 130
Alphabetical parts list 132
Numerical parts list 135

Appendix A Service and support 139
Hewlett-Packard limited warranty statement 140
HP's Premium Protection Warranty: LaserJet print cartridge limited warranty statement 142
HP's LaserJet imaging drum limited warranty statement for replacement imaging drums 143
HP policy on non-HP supplies 144
HP anticounterfeit Web site 145
Data stored on the print cartridge and imaging drum 146
End User License Agreement 147
OpenSSL 150
Customer support 151
Repack the product 152

Appendix B Product specifications 153
Physical specifications 154
Power consumption, electrical specifications, and acoustic emissions 154
Environmental specifications 154

Appendix C Regulatory information 155
FCC regulations 156
Environmental product stewardship program 157
Protecting the environment 157
Ozone production 157
Power consumption 157
Toner consumption 157

Paper use 157
Plastics 157
HP LaserJet print supplies 158
Return and recycling instructions 158
United States and Puerto Rico 158
Multiple returns (more than one cartridge) 158
Single returns 158
Shipping 158
Non-U.S. returns 159
Paper 159
Material restrictions 159
Disposal of waste equipment by users in private households in the European Union 160
Chemical substances 160
Material Safety Data Sheet (MSDS) 160
For more information 160
Declaration of Conformity 161
Safety statements 163
Laser safety 163
Canadian DOC regulations 163
VCCI statement (Japan) 163
Power cord instructions 163
Power cord statement (Japan) 163
EMC statement (Korea) 164
Laser statement for Finland 164
GS statement (Germany) 165
Substances Table (China) 165
Restriction on Hazardous Substances statement (Turkey) 165
Restriction on Hazardous Substances statement (Ukraine) 165
Additional statements for wireless products 166
FCC compliance statement—United States 166
Australia statement 166
Brazil ANATEL statement 166
Canadian statements 166
European Union regulatory notice 166
Notice for use in France 167
Notice for use in Russia 167
Korean statement 167
Taiwan statement 168
Vietnam Telecom wireless marking for ICTQC Type approved products 168

Index 169